# TOP AND CONSOLE PARTS

27"ELECTRIC DRYER

**For Models: LEQ8611LW1, LEQ8611LG1**
**(White/Grey) (Biscuit/Gold)**

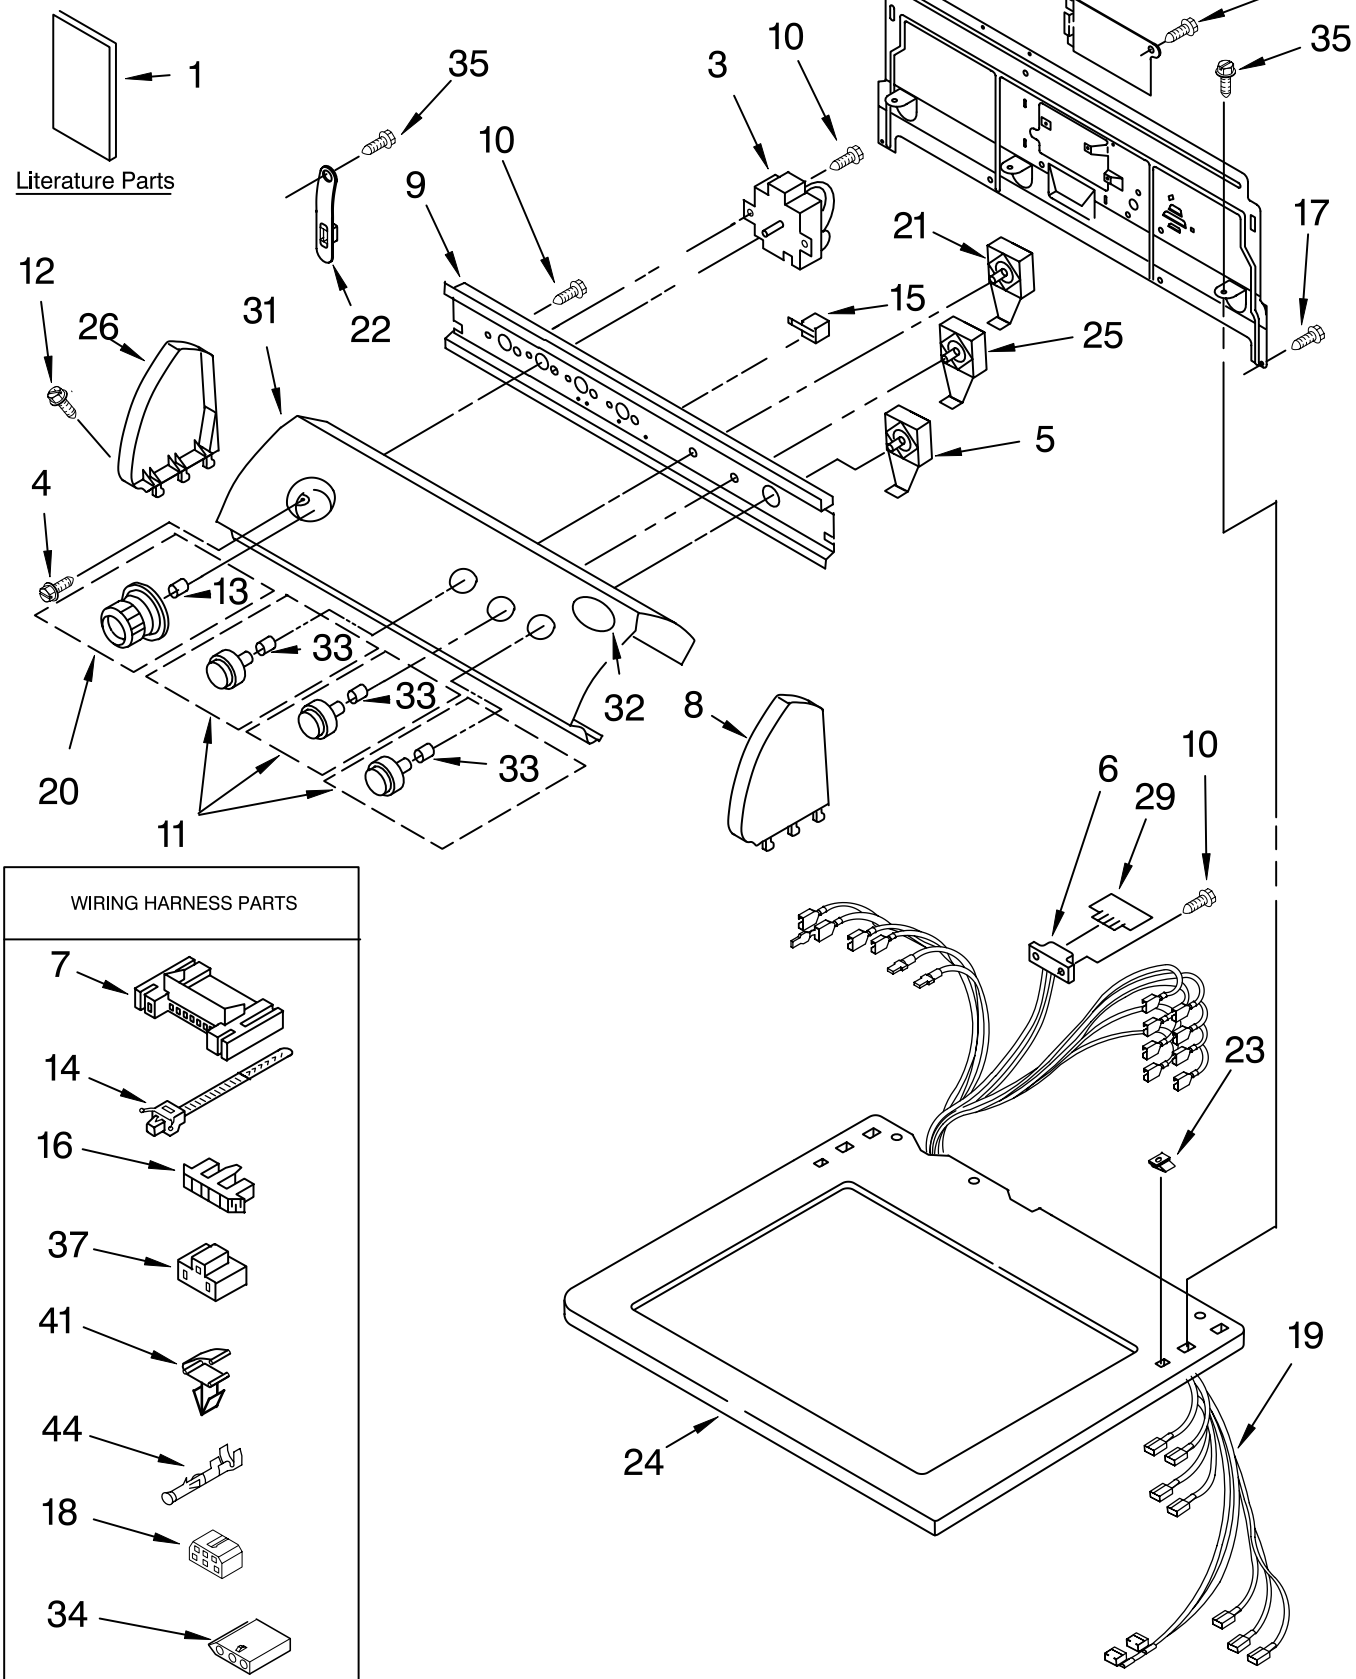


WIRING HARNESS PARTS




FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP AND CONSOLE PARTS

**For Models: LEQ8611LW1, LEQ8611LG1**
**(White/Grey) (Biscuit/Gold)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Literature Parts |
| | LIT8541832 | Wiring Diagram |
| | LIT8522243 | Guide, Use & Care |
| | LIT8535833 | Instructions Installation |
| | | **Following May Be Purchased** |
| | | **DO−IT−YOURSELF REPAIR MANUALS** |
| | LIT677818 | Manual, Do−It−Yourself Repair (Dryer) |
| 2 | 8317305 | Panel, Rear Console |
| 3 | 3406725 | Timer, 60 Hz. |
| 4 | 3400859 | Screw, Grounding (8−18 x 7/32) |
| 5 | 3398095 | Switch, Push−To−Start |
| 6 | 3391885 | Connector, Edge |
| 7 | 3395683 | Connector (Motor) |
| 8 | | Cap, End (R.H.) |
| | 8271359 | White |
| | 8271362 | Biscuit |
| 9 | 8271316 | Bracket, Control |
| 10 | 3390646 | Screw, 8−18 x 5/16 |
| 11 | | Knob, Control (3) |
| | 8538957 | LEQ8611LW1 |
| | 8538958 | LEQ8611LG1 |
| 12 | 388326 | Screw, Console |
| 13 | 688805 | Clip |
| 14 | 3391018 | Tie, Cable |
| 15 | 694419 | Buzzer, Mini |
| 16 | 3397269 | Connector, Timer |
| 17 | 693995 | Screw, 8−18 x 3/8 |
| 18 | 3347243 | Connector, 6−Circuit |
| 19 | 8299958 | Harness, Electric |
| 20 | | Timer Knob Assembly |
| | 8538953 | LEQ8611LW1 |
| | 8538954 | LEQ8611LG1 |
| 21 | 8530152 | Switch, Temperature |
| 22 | 8318255 | Strap, Console |
| 23 | 357213 | Nut, Push−In (2) |
| 24 | | Top |
| | 8271399 | White |
| | 8271401 | Biscuit |
| 25 | 3405156 | Switch, Wrinkle Shield |
| 26 | | Cap, End (L.H.) |
| | 8271365 | White |
| | 8271368 | Biscuit |
| 28 | 8317342 | Cover, Terminal Block |
| 29 | 3390537 | Control, Electronic |
| 30 | 3390814 | Screw, 8−18 x 3/8 |
| 31 | | Panel, Control (Includes Illus. 32) |
| | 8532623 | Grey |
| | 8532624 | Gold |
| 32 | 3955775 | Medallion |
| 33 | 8536939 | Spring Clip |
| 34 | 3936144 | Connector |
| 35 | 3390647 | Screw, 8−18 x 1/2 |
| 37 | 3401144 | Connector (PTS Relay) |
| 41 | 3394427 | Clip, Harness |
| 44 | 94614 | Terminal |

# CABINET PARTS

**For Models: LEQ8611LW1, LEQ8611LG1**
**(White/Grey) (Biscuit/Gold)**

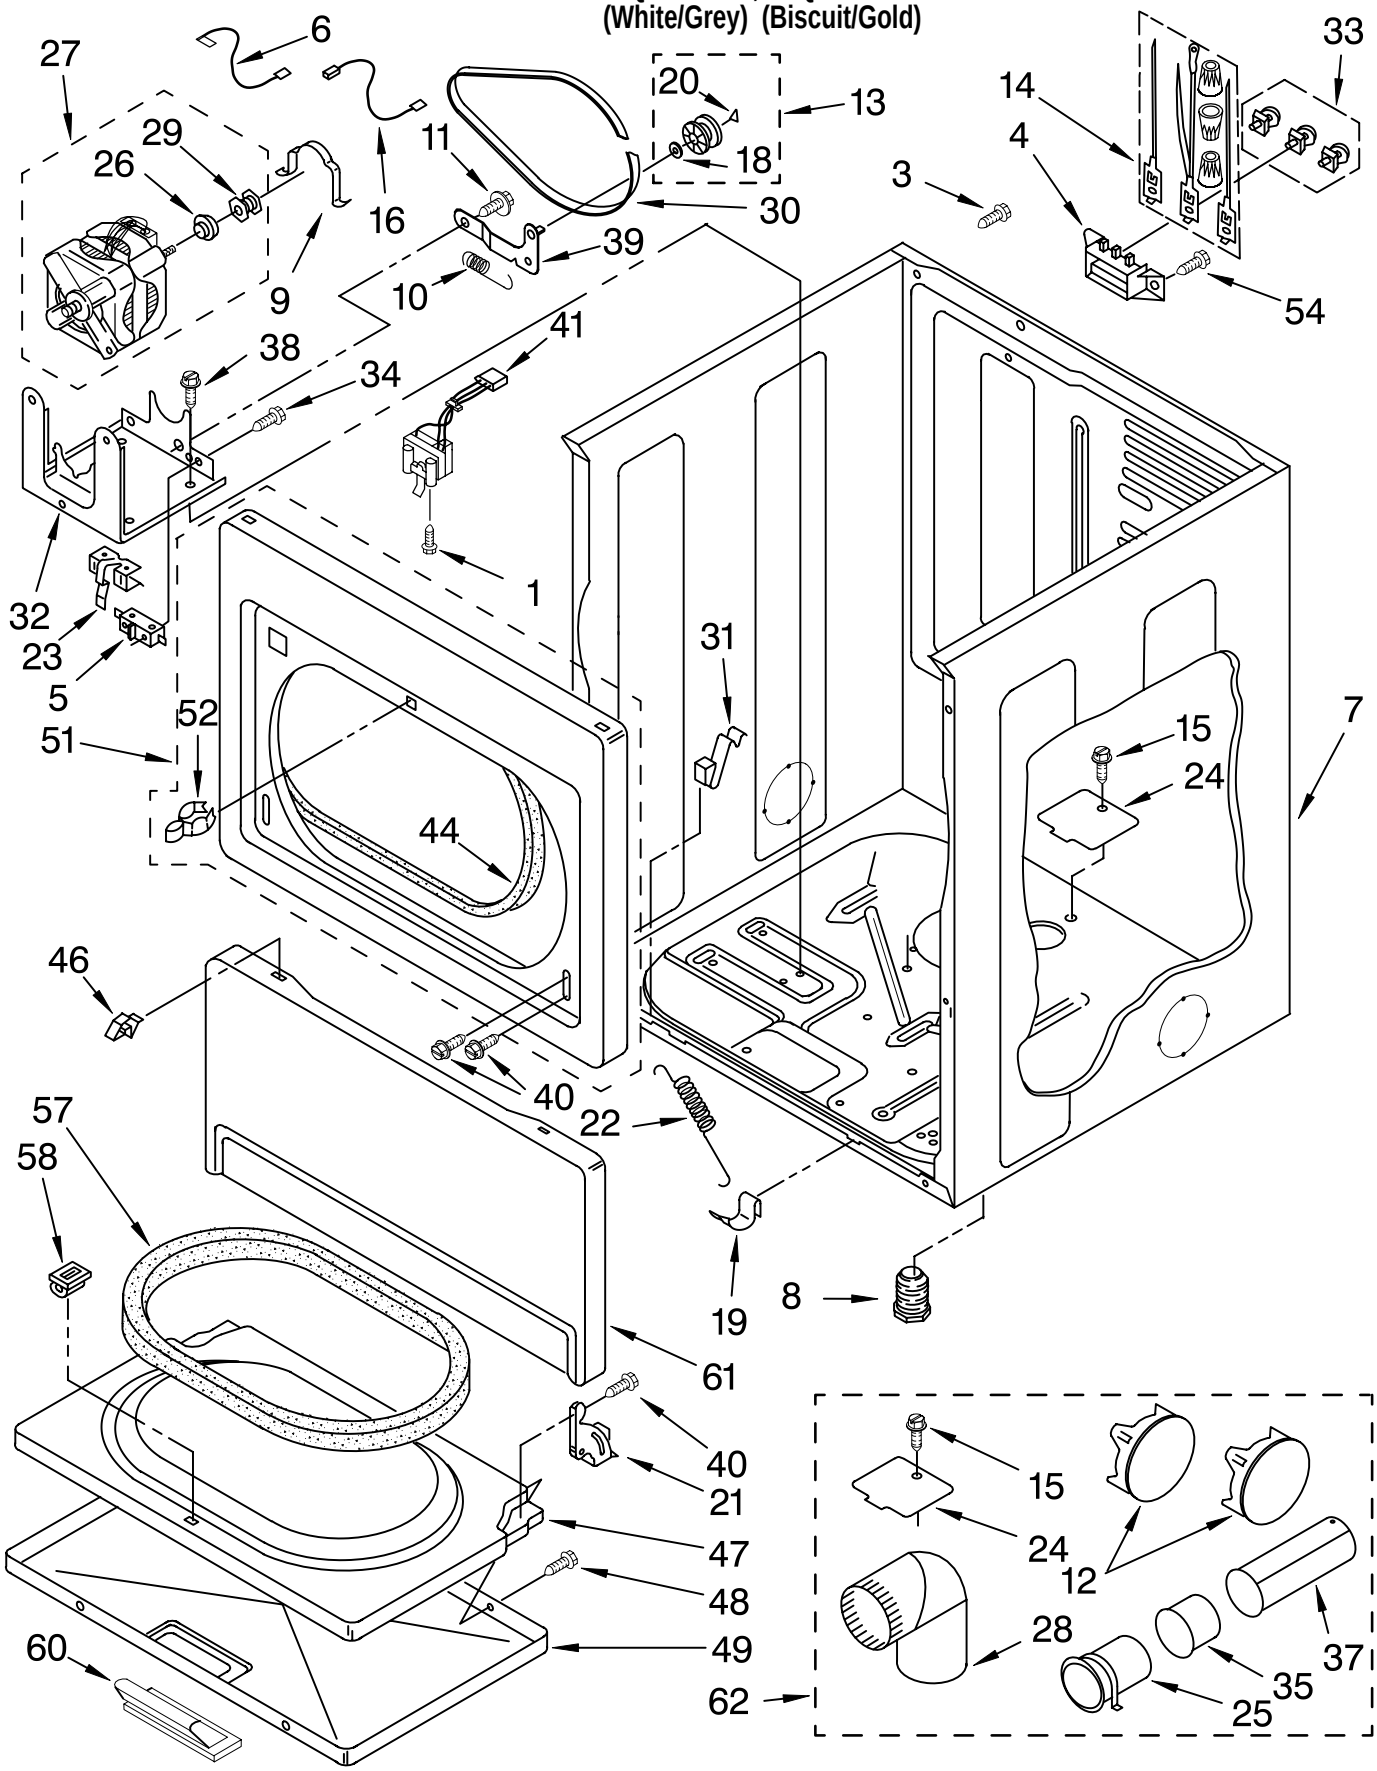


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET PARTS

**For Models: LEQ8611LW1, LEQ8611LG1**
**(White/Grey) (Biscuit/Gold)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 697773 | Screw, 6−20 x 7/8 |
| 3 | 697776 | Screw, 10−32 x 5/8 |
| 4 | 3397659 | Block, Terminal |
| 5 | 3394881 | Switch, Broken Belt |
| 6 | 3398948 | Wire, Jumper (Broken Belt Switch) |
| 7 | | Cabinet |
| | 8310656 | White |
| | 8310659 | Biscuit |
| 8 | 3392100 | Foot, Dryer |
| | 279810 | Foot − Optional (Extended Length Package Of 2) (Not Included) |
| 9 | 660658 | Clamp, Motor (2) |
| 10 | 3387374 | Spring, Idler |
| 11 | 3389420 | Retainer, Idler |
| 12 | | Plug, Multivent |
| | 697750 | White |
| | 3388311 | Biscuit |
| 13 | 3388672 | Pulley Assembly |
| 14 | 279318 | Terminal, Brass & Tinned (3) (Includes Illus. 33) |
| 15 | 693995 | Screw, 8−18 x 3/8 |
| 16 | 3394081 | Wire, Belt Switch |
| 18 | 233520 | Washer, Thrust |
| 19 | 297092 | Clip (2) |
| 20 | 690997 | Tri Ring |
| 21 | 3387560 | Hinge, Door (R.H.) |
| | 3387559 | Hinge, Door (L.H.) |
| 22 | 3387565 | Spring, Door (2) |
| 23 | 8066120 | Lever, Snap Switch |
| 24 | 3394331 | Cover−Plate |
| 25 | 3395532 | Exhaust Pipe & Bracket |
| 26 | 3393657 | Restrainer, Belt |
| 27 | 8538263 | Motor, Assembly 60 HZ. |
| 28 | 49026 | 4" − 90° Elbow |
| 29 | 3389729 | Pulley 60 HZ. |
| 30 | 3387610 | Belt, Drive |
| 31 | 3388600 | Clip, Lint, Duct |
| 32 | 3387118 | Bracket, Motor |
| 33 | 279393 | Terminal Block Screw Kit (For Terminal Block) |
| 34 | 98129 | Screw, 6−20 x 1 3/8 |
| 35 | 3395534 | Exhaust Pipe (Short) |
| 37 | 3395535 | Exhaust Pipe (Long) |
| 38 | 3390663 | Screw, 10−16 x 1/2 |
| 39 | 3388674 | Idler Bracket |
| 40 | 3357011 | Screw, 10−16 x 1/2 |
| 41 | 3406107 | Door Switch Assembly |
| 44 | 3387242 | Seal, Front Panel |
| 46 | 3388229 | Retainer |
| 47 | 697655 | Door, Rear |
| 48 | 694091 | Screw, 8−18 x 3/8 |
| 49 | | Door, Front |
| | 697221 | White |
| | 3977763 | Biscuit |
| 51 | | Upper Front Panel |
| | 697227 | White |
| | 3977761 | Biscuit |
| 52 | 696144 | Strike, Door |
| 54 | 3393008 | Screw, 10−16 x 1/2 |
| 57 | 3390736 | Seal, Door |
| 58 | 690081 | Catch, Door Assembly |
| 60 | | Handle, Door |
| | 690270 | White |
| | 3977242 | Biscuit |
| 61 | | Toe, Panel |
| | 697215 | White |
| | 3977764 | Biscuit |

Optional Parts Not Included

Dryer Exhaust Kit
(For Side & Bottom Venting)

| | | |
|---|---|---|
| 62 | 279818 | White |
| | 279925 | Biscuit |

# OPTIONAL PARTS (NOT INCLUDED)

**ACCESSORY PARTS**

| | |
|---|---|
| 4392067 | Kit, Dryer Repair |
| 3406911 | Dry Rack |
| 8522199 | Kit, Dryer Vent Testing |

**PAINT, TOUCH−UP (1/2oz.)**

| | |
|---|---|
| 72017 | White |
| 4392899 | Biscuit |

**PAINT, PRESSURIZED SPRAY (12 oz.)**

| | |
|---|---|
| 350930 | White |
| 4392901 | Biscuit |
| 350938 | Primer, Gray |

**PAINT, BULK (1 qt.)**

| | |
|---|---|
| 799344 | White (Uncut) |
| 4392900 | Biscuit(Uncut) |

# BULKHEAD PARTS

**For Models: LEQ8611LW1, LEQ8611LG1**
**(White/Grey) (Biscuit/Gold)**

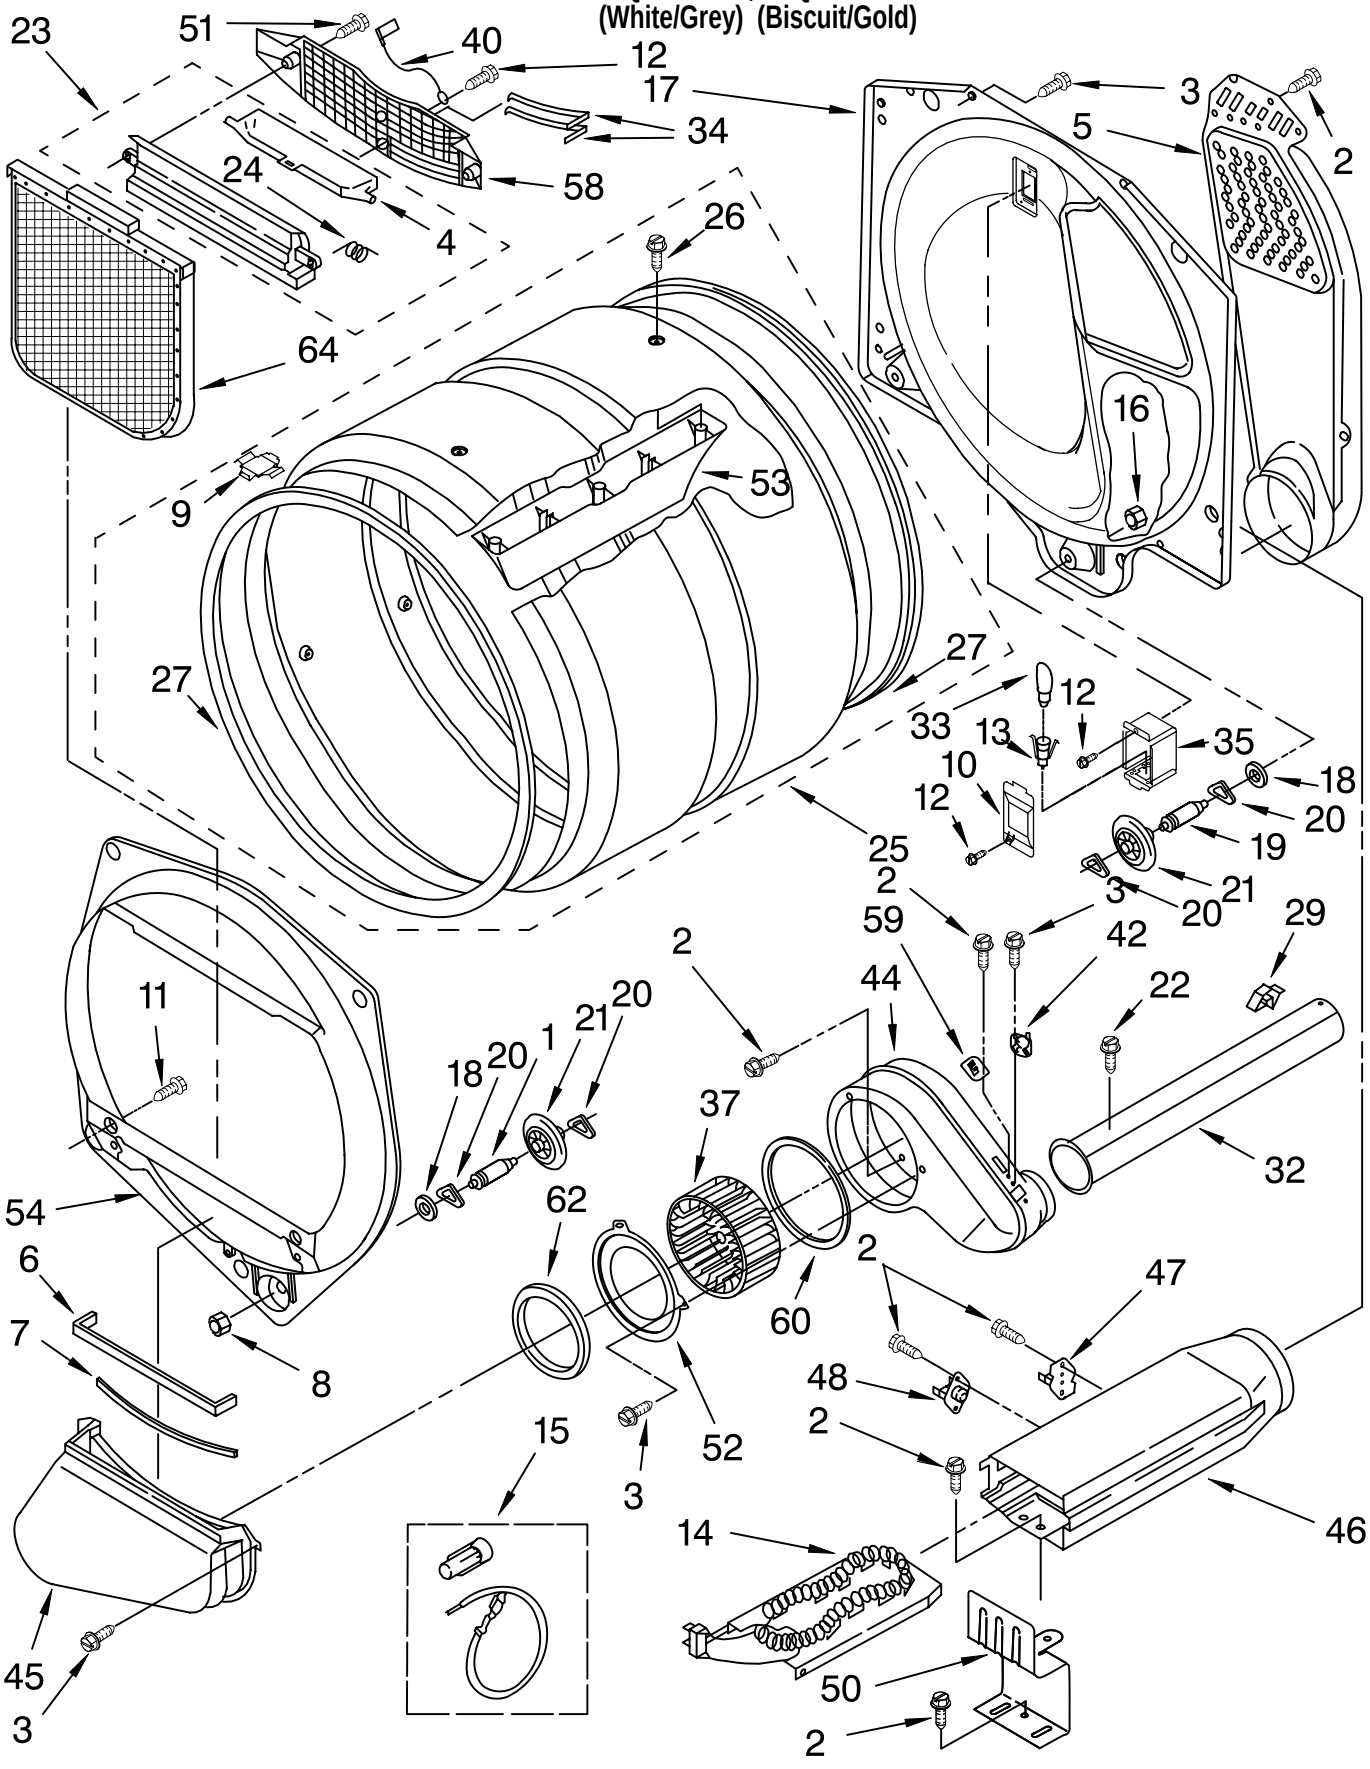


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# BULKHEAD PARTS

**For Models: LEQ8611LW1, LEQ8611LG1**
**(White/Grey) (Biscuit/Gold)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 3399508 | Shaft, R.H. Thread |
| 2 | 90767 | Screw, 8−18 x 3/8 |
| 3 | 3390647 | Screw, 8−18 x 1/2 |
| 4 | 3394984 | Door, Lint Screen |
| 5 | 697354 | Air Duct Assembly |
| 6 | 697813 | Seal, Outlet Housing |
| 7 | 697814 | Seal, Drum Front |
| 8 | 3359452 | Nut,3/8 x 16(R.H.) |
| 9 | 8066086 | Drum Hole Plug |
| 10 | 3402841 | Lens, Drum Light |
| 11 | 695240 | Screw, 8−18 x 1/2 |
| 12 | 487909 | Screw, 10−15 x 1/2 |
| 13 | 3403634 | Socket, Light |
| 14 | 3387747 | Heater Element |
| 15 | 279457 | Terminal Wire Kit (For Heater Element Wiring Harness Repair) |
| 16 | 3387709 | Nut, 3/8−16 (L.H.) |
| 17 | 8520836 | Bulkhead, Rear |
| 18 | 3387459 | Washer, Support |
| 19 | 3399509 | Shaft, L.H. Thread |
| 20 | 690997 | Ring, Tri |
| 21 | 8536973 | Roller, Support |
| 22 | 3390646 | Screw, 8−18 x 5/16 |
| 23 | 3394985 | Outlet Housing Assembly |
| 24 | 3394986 | Spring, Lint Screen Door |
| 25 | 8318215 | Complete Drum Assembly |
| 26 | 97787 | Screw, 11−16 x 3/4 |
| 27 | 697694 | Seal, Drum |
| 29 | 3388229 | Clip |
| 32 | 8318486 | Exhaust Pipe |
| 33 | 3406124 | Bulb, Light |
| 34 | 3387223 | Electrode, Sensor |
| 35 | 3977373 | Bracket, Drum Light |
| 37 | 697772 | Wheel, Blower |
| 40 | 3392258 | Wire, Ground (Sensor) |
| 42 | 8318268 | Thermostat, Internal−Bias |
| 44 | 8541568 | Housing, Blower |
| 45 | 8530036 | Lint Duct Assembly |
| 46 | 3392537 | Heater Box |
| 47 | 3977394 | Thermal Cut−Off (Includes Illus. 48) |
| 48 | 3390291 | Thermostat 250°F (121°C) |
| 50 | 8066099 | Bracket, Heater Box |
| 51 | 3387230 | Screw, 10−16 x 1 |
| 52 | 697771 | Cover, Blower (Includes Illus. 62) |
| 53 | 697693 | Baffle, Drum |
| 54 | 697557 | Bulkhead, Front |
| 58 | 8299979 | Grill, Outlet |
| 59 | 3392519 | Thermal Fuse |
| 60 | 697770 | Seal, Cover Plate |
| 62 | 697769 | Seal, Lint Duct |
| 64 | 3390721 | Lint, Screen |